

Aquila®

GLOW LAMP

User manual

Modell: Lightbird G1



HOW TO USE YOUR LIGHTBIRD G1

Usage

Twist to change the modes : Torch in low mode - high mode - Torch & Camping light light at the same time - Camping light in high mode - medium mode - low mode- breath mode- off (forward and reverse switching order is different).


The power indicator lights up for 5 second on each mode. One indicator flashes when the power is low.

The charging indicator shows charging status and when all is turned on the device is fully charged.

Cautions

- 1 - Avoid using liquid with corrosive chemicals or hard cloth to wipe the surface of the machine.
- 2 - Do not place the machine in high temperature and avoid strong collision with the machine when using it.
- 3 - The specifications will be improved upon notice if any upgrades and improvements .

Included:

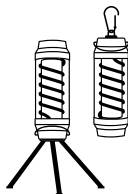

Carabiner hook &
Kickstand

Size : 34×91 mm
Weight:72g

Features:

- 360° lighting
- Tuning /Twist Switch
- Candle Light
- Indicator LED
- Torch
- Splash proof (IPX4)

PRODUCT SPECIFICATION

	Low mode:	Mid mode:	High mode:
	≥50 lm in 20h	-	≥90 lm in 5h
	≥10 lm in 10h	≥30 lm in 6h	≥60 lm in 2.5h

Flashlight LED:	1W 6000-6500K
Specification of Built-in Battery	800mAh/3.7V
Fully Charge Time via USB-C Input Cable	1.5-2.5 hours

Visit aqiila.eu

Get in touch: www.aqiila.eu | hello@aqiila.eu

Contact: GPBM Nordic AB | Sörredsvägen 113 | 418 78
Göteborg | Sweden

Contact: Brands Services B.V. | Florijn 14-16 5751 PC
Deurne | The Netherlands