

9)



9) Drill the dashboard to create the needed holes.

10)



10) Screw the radio block into the dashboard using 4 screws 'B' (2 on each side), then replace the OEM radio frame. Attach the Alpine display to the assembled radio block in the dashboard and fix it.

11)



11) What it looks like after the previous steps.

Facia plate installation kit for:

VOLKSWAGEN

Model: T6.1

Year: 2019

Kit content: Facia plate
Mounting brackets
Screws

Compatibility: Compatible with Alpine Halo

Customer code: KIT-F9VW-T61




Screws
"A"



Screws
"B"



Screws
"C"

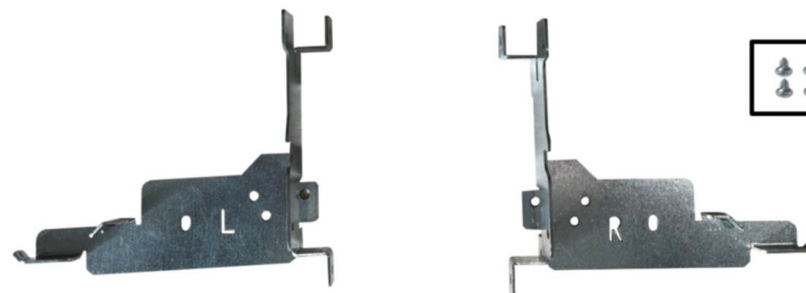

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
04/2023 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
04/2023 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

STEPS FOR REMOVING THE ORIGINAL OEM RADIO:

1)



1) This is what the original radio looks like.

2)



2) Removing the instrument panel frame.

3)



3) Removing the radio frame.

4)



4) Removing OEM radios with Volkswagen keys.


5)



5) What it looks like after the previous steps.


STEPS FOR INSTALLATION THE NEW RADIO:

6)

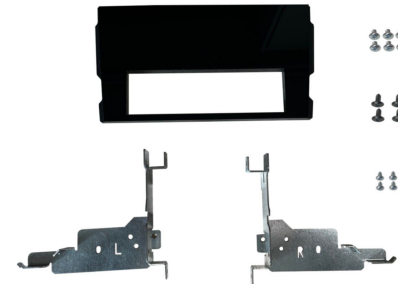

6) Take facia plate; mounting brackets and the screws.

7)

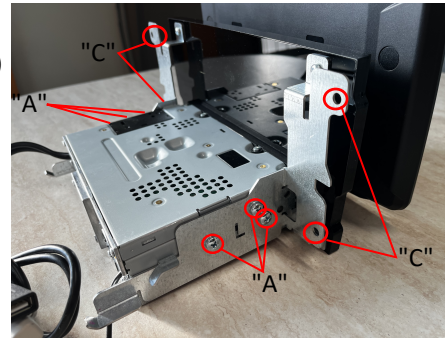

7) Screw the both brackets with 6 screws 'A' (3 on each side) to the main unit of Alpine Halo.

Screw the facia plate to the brackets using screws 'C' (2 on each side).

8)



8) Place the radio block in the dashboard and mark the 4 holes.